



#### Registered Office:

Units 2-3 Station Road Industrial Estate,

Browning Road, Heathfield, East Sussex, TN21 8DB

Tel: 01435 515001

Web: [www.justvaluedoors.co.uk](http://www.justvaluedoors.co.uk)

Company Registration No: 09635370 | FENSA Registration No: 33864

## Aluminium Single Door Installation Guide

### Before You Start

Read this guide all the way through before starting.

Check the size of the opening against the doors outer frame to ensure a good fit.

Ensure you have all components available - cills, end caps, gaskets, packers etc

It is vital to ensure that the door is fitted level, plumb and square and that it is toe and heeled correctly. Failure to do this will mean the doors will not open or close correctly and the locking mechanism might not work.


1

Screw fix and seal the cill end caps in position. Set the cill in the required position. Make sure that the cill is absolutely level.

2


The door can now be positioned on the cill and in the opening.

Use packers in the corners to hold the door in place and to ensure it remains level, plumb and square. To check the outer frame is square measure the diagonals. There should be no more than 1 - 2mm difference between A and B

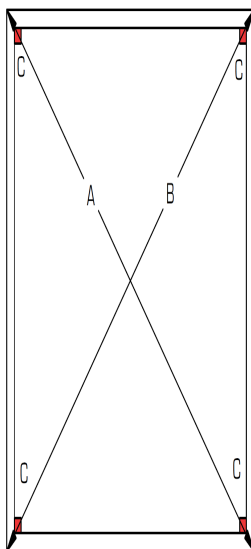

3

Fix through the thermal break at the bottom into the cill (do not screw through the drain holes).

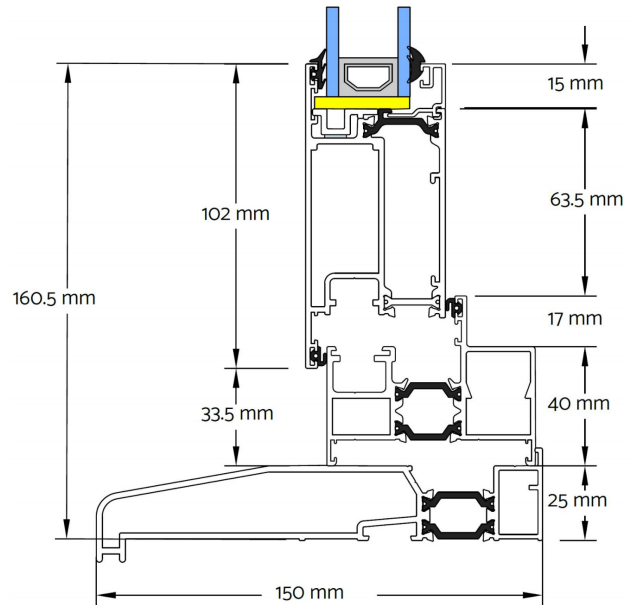

Standard Threshold on Cill

4

The first fixing must always occur within 150mm of each corner and at no more than 600mm centres. Do not over tighten fixings. Packers should be used around the fixings to prevent distortion of the frame. Foam can be used but it is not an alternative to screw fixing and care should be taken not to come into contact with the painted finish.

Fix the outer frame into brickwork up both sides.

Fix the head of the outer frame into brickwork or steel above.

Double check the diagonals to make sure they are still equal.

Check that the doors are working correctly and operating smoothly.


5

Prior to glazing ensure that both doors are closed and locked.


Remove the glazing beads of one door.

It is vital that the doors are 'toe and heeled' correctly. Failure to toe and heel correctly will result in the doors not operating properly.


Using the glazing packers supplied, pack the bottom corner of the hinge side, top corner of the opposite/outside.

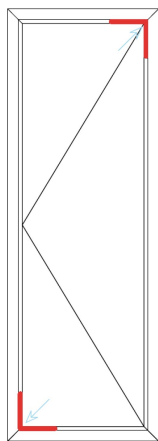

Example on of packing positions

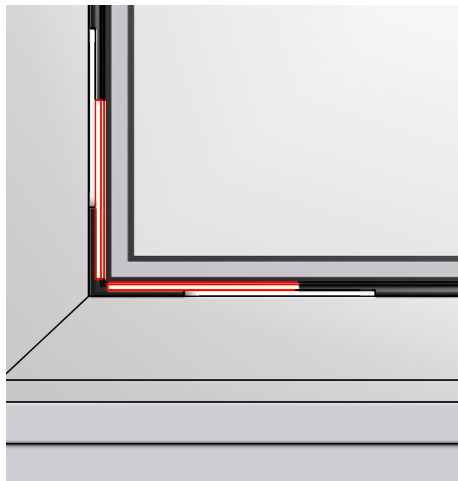

'Heel' - Pack bottom hinge side

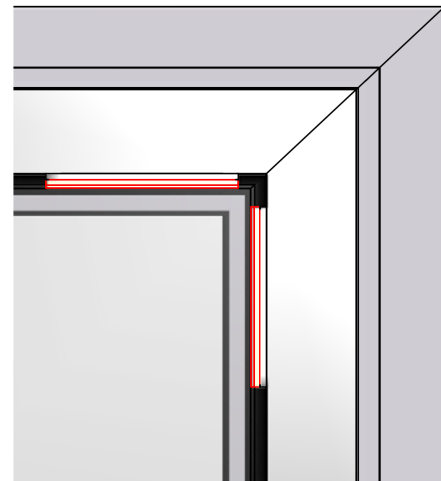

'Toe' - Pack top opposite side

6

Lift the glass into place and fit extra packers where required to take up any slack. Refit the glazing beads.

Fit the push in gasket. To ease fitting the gasket should be dipped in warm soapy water, particularly if its cold. Over stack the gaskets to allow for a small amount of shrinkage. The gaskets are designed to be a tight fit.

Repeat with remaining leafs.

7

Silicone seal internally and externally, clean down.