

# ProSecure Door Hinge Adjustment Instructions



1

To release cover remove security screw from under the hinge and then insert 5mm blade screwdriver and twist. Use small blade screw driver to release cover caps.

2

4mm hex key required

UNLOCK  
LOCK

+5mm  
-5mm

LOCK  
UNLOCK

To adjust lateral position, first turn the unlock screw a 1/4 turn. Then use the adjustment screw to adjust up to 5mm in either direction. Finally tighten lock screw.

3

4mm hex key required

Remove cap

+5mm

Height adjustment: Using a 4mm hex key turn the screw down to lift the hinge by up to 5mm.

4

4mm hex key required

0.5mm  
0.5mm

+  
-

Compression adjustment: Push out hinge pin and turn to alter compression.

5

The sash can be removed and fitted when in an open position by lifting or lowering the sash assembly onto the frame datum.

6

Alternatively the sash can be removed and fitted in the closed position by removing the security screws and hinges pins and then lifting the sash off the frame part.